

MudSling™ R1300 GSA

Installation Guide

+1 908. 652. 6779

sales@machineartmoto.com

PARTS:

MudSling R1300 GSA

6 - Nylon Rivet Screws
4 for Installation
+ 2 Spares

Tools Required:

- T20 Torx Driver
- Short Phillips Screwdriver


- * BEFORE INSTALLATION, READ THIS GUIDE.
- * SET THE BIKE ON ITS CENTER STAND ON LEVEL GROUND.
- * MUDSLING CAN BE INSTALLED WITHOUT REMOVING THE REAR WHEEL.
- * **MS GSA - DOES NOT FIT THE GS.**




CARE INSTRUCTIONS:

Clean with soap and water.
Use Armor-All to restore appearance.


Double check tightness of the installation.
You're Ready to Ride!

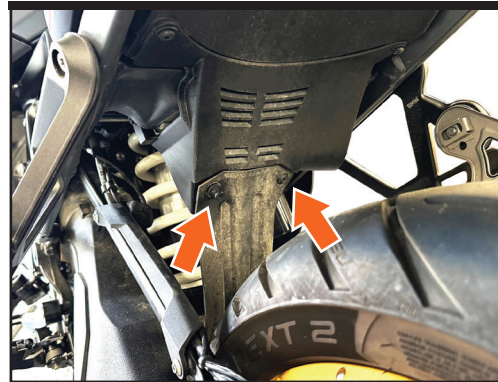

1 Remove the 2 plastic Rivet Screws holding the rubber mudflap using a T20 Torx Head driver. Pull them out & remove the mudflap.

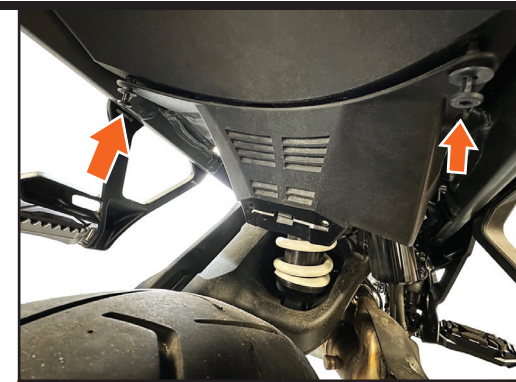

2 Remove the 2 plastic Upper Rivet Screws holding the BMW cover using a T20 Torx driver. **Do Not remove the cover.**

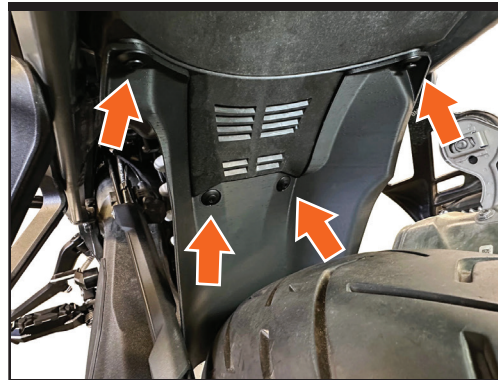

3 Position the MudSling over the BMW cover to align with the **Upper** and **Lower** mounting holes. **INSERT - 2 - Rivet Screws** into the top holes.
2 - Rivet Screws into the bottom holes.



4 Push-in the Rivet Screws Heads and make sure they are fully seated. Tighten the screws with a Short Handle Phillips Screwdriver.